

Clean the Everest 400 Printer Tray


Use this procedure to clean the Everest Printer Tray.

Required Tools

- Cleaning Swab
- Isopropyl Alcohol

Clean the Printer Tray Open Sensor

1. Open the front flap of the printer tray.
 - a. Press the 2 button on the operator panel. The printer tray will open.
 - b. Hold the flap below the printer tray with your finger, and press the 2 button to close the printer tray.
 - c. Grasp the flap near the left hinge and firmly lift up. You will hear a slight click, and the flap will be locked in an open position.
2. Use a cleaning swab with isopropyl alcohol and wipe the inside edges of U shaped optical sensor.

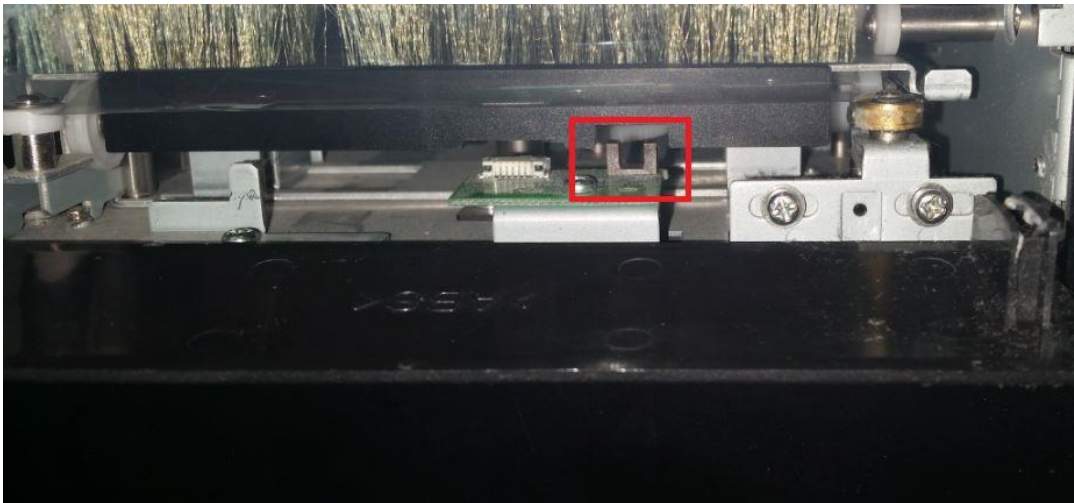

3. Unlock the flap. Firmly press down near the left hinge to unlock the flap.