


Install the Carousel on a Producer, Catalyst, or Autoprinter

1. Identify the tabs on the bottom of the carousel, and the slots on the platter.

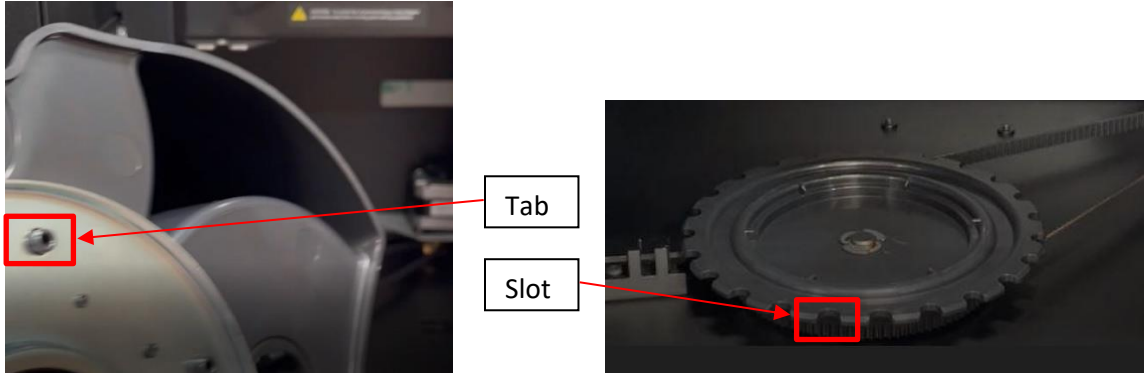

2. Place the carousel on the platter, lining up the tabs with the slots. Align the bearing with its bracket.



3. Move the carousel left and right, until it drops into the slots and the bearing drops into the bracket.



4. Rotate the carousel left and right to ensure it is properly seated. You should feel the resistance of the carousel motor.