## R I M A G E<sup>®</sup>

2000i / 2000i Series II firmware V6.216

Field

### 2000i Firmware Instructions

#### **Required Tools**

- Gemini Utility
- Firmware versions 6.216

## **Process**

- 1. Download the firmware version from www.rimage.com.
- 2. Launch rimage system manager and stop the production server.

Messaging View Control Center Server	Order Cluster Help	
Control Centers 6 Server Clu	sters 🥩 Clients 🔯 Refresh 📴 Disconnect	
Control Centers An Server Clu Control Center: RIMAGEEDS Production Server Imaging Server	Back to Control Center         Production Server: RIMAGEED5_P501         Current state is Active, Procesting orders         erver Info         Server Orders         Server Info         Server Information         Version 8.6.98.0         RIMAGEEDS_P501         Running on RIMAGEEDS as a Windows Service         Using Rimage System Folder \\RIMAGEEDS\Rimage         Assigned to DefaultProductionCluster cluster         Server password is not set         Not logged into the server         Production Information	
	Image streaming is enabled Spanning is enabled Overlap recording is enabled	
	Order set processing (for spanning) is enabled	
	Mode is Attended Operating mode is Normal	
	0 copies produced and 0 copies rejected, since this server started	
	Data verific is not enabled	

3. Next launch the Gemini utility from the windows search and browse to the firmware you previously downloaded.

# R I M A G E<sup>®</sup>

Q. Serv	🙀 Rimage System	Manager	
File	Messaging View	Rimage Autoloader Utility	
	Messaging View	Rimage Autoloader Utility         Inquiry ID:       RIMAGE 5410       VERSION 6.035A         Status:       About         Update Firmware       Disable firmware device compatibility check       Port:         Update Firmware       Disable firmware device compatibility check       Port:         Calibrate Margins       Print Calibration Grid         Display Settings       Image: Setial Numbers         Autoloader SN:       6507006       Printer SN:         Z2391203       Update SN         Loader Statistics       Printer Statistics	
		# of discs picked: 29227 Printer statistics Print count: 2370 Ribbon count: 93 ITS Count 422	

4. Select the firmware and press update firmware. When completed, restart the production server in Rimage System Manager.

e	Rimage System Manager	
-	Messaging View Control Center	Server Order Cluster Help
Sei	Control Centers	er Clusters 🕏 Clients 🔯 Refresh 🛃 Disconnect
	Control Center: RIMAGEEDS	Back to Control Center      Production Server      Current state is Stopped      Server Settings      Server and perver proces perverage
	Messages	經문 Connected to localhost as Administrator