

## Maintain the Everest Printer

**!** **Important!** For optimum performance, keep the Everest printer in a clean, dust-free environment.

You must perform routine maintenance to keep the Everest printer operating at optimum performance. Maintenance tasks and frequency are described in the table below.

### Maintenance Schedule

Task	Frequency
Change the print ribbon 3-Color Ribbon (CMY) 4-Color Ribbon (CMY+W) Black Ribbon (monochrome)	After 500 discs After 375 discs After 1000 discs
Change the retransfer ribbon	PN 203474-001 – after 500 discs PN 203384-001 and PN 200049 – after 1000 discs
Clean the print head	After 2000 discs (as needed)
Clean the tacky rollers	After 2000 discs (as needed)
Clean the air filters	Monthly
Clean the platen roller	As needed Clean the platen roller if you notice a diminished print quality, such as white specks, on the printed disc.
Clean the exterior Wipe the exterior of the printer with a lint-free cloth.	Weekly