

Maintain the Producer III

Use the information in this section to keep your Producer III in optimal operating condition.

Overview

Regular preventative maintenance of your Producer III can help to ensure error-free recordings and clean printed labels. Maintenance involves cleaning the system and aligning the printer on top of the autoloader.

 **Note:** The printer has its own maintenance requirements. Refer to your Printer User Guide for information.

Cautionary Information

 **Caution:** To avoid damaging the Producer III during maintenance:

- *Never use oils, silicone, or other lubricants on any part of the Producer III .*
- *Use only non-abrasive cleaners to wipe down the surfaces of your Producer III.*
- *Never use cleaners to clean the embedded PC.*
- *Avoid pouring cleaners directly onto the Producer III. Instead, apply the cleaner to the cloth first.*
- *Observe precautions for electrostatic-sensitive devices whenever you access the embedded PC.*

Preventative Maintenance Schedule

 **Note:** Your system may require more frequent maintenance if used in a dusty area, such as a store or warehouse.

Before you begin:

 **Warning!** Always power off the autoloader and unplug the power cord before you access the embedded PC.

1. Power off the **Producer III**.
2. Disconnect the **power cord**.

 **Important!** Failure to follow the maintenance schedule outlined below may void your warranty.

Task	Tool	Frequency
Wipe down the lift arm shaft and pay close attention to: <ul style="list-style-type: none"> • The area around the base of the shaft • The area just above the lift arm 	Lint-free cloth	Weekly
Wipe down all surfaces of the autoloader, including: <ul style="list-style-type: none"> • Sides and top • Door • Output bin • Carousel • Base (remove the carousel first) • Top surface on the lift arm 	Lint-free cloth Non-abrasive, all-purpose cleaner	Weekly
Remove dust and debris from the fans at the back of the autoloader.	Can of compressed air	Monthly
Remove dust and debris from the openings at the back of the autoloader. For embedded systems only (6100N, 7100N, and 8100N), remove the carousel and remove dust and debris from the openings to the PC module.	Vacuum	Monthly
Align the printer. Refer to the <i>Align the Printer</i> instructions in your User Guide.	Torx T25 screwdriver	Upon installation, if the discs are not picked correctly from the printer tray, or if there are clamping errors.