



Maintain the Professional

Use the information in this section to keep your Professional in optimal operating condition.


 **Warning!** Always power off the autoloader and unplug the power cord before you access the embedded PC.

Overview

Regular preventative maintenance of your Professional can help to ensure error-free recordings and clean printed labels. Maintenance involves cleaning the system and aligning the Everest printer on top of the autoloader.

 **Note:** The Everest printer has its own maintenance requirements. Refer to your *Rimage Everest User Guide* for information.

Cautionary Information


 **Caution:** To avoid damaging the Professional during maintenance:

- *Never use oils, silicone, or other lubricants on any part of the Professional.*
- *Use only non-abrasive cleaners to wipe down the surfaces of your Professional.*
- *Never use cleaners to clean the embedded PC.*
- *Avoid pouring cleaners directly onto the Professional. Instead, apply the cleaner to the cloth first.*
- *Observe precautions for electrostatic-sensitive devices whenever you access the embedded PC.*




Preventative Maintenance Schedule

Use the following table as a guideline for how often to perform preventative maintenance tasks.

 **Note:** Your system may require more frequent maintenance if used in a dusty area, such as a store or warehouse.

Before you begin:

1. Power off the **Professional**.
2. Disconnect the **power cord**.

 **Important!** Failure to follow the maintenance schedule outlined below may void your warranty.

Tool	Task	Frequency
Lint-free cloth Non-abrasive, all-purpose cleaner	Wipe down all surfaces of the autoloader, including: <ul style="list-style-type: none"> • Sides and top • Input bins • Output trays • Output bin • Base (remove the input bin first) • Top surface on the lift arm 	Weekly
Can of compressed air	Remove dust and debris from the fans at the back of the autoloader.	Monthly
Vacuum	Remove dust and debris from the openings at the back of the autoloader.	Monthly
Can of compressed air	Remove the side panels and remove all dust from the embedded PC.	Monthly
Torx T25 driver	Align the Everest printer. Refer to the <i>Align the Printer</i> section in the <i>Rimage Professional User Guide</i> .	On installation and as needed