

# Rimage Rapid API Programming Guide

For Rimage Software Development Kit 9.0

**R I M A G E<sup>®</sup>**



### **Corporate Headquarters:**

Rimage Corporation  
7725 Washington Avenue South  
Minneapolis, MN 55439  
USA  
800-553-8312 (toll free US)  
Service: +1 952-946-0004 (Mexico/Latin  
America)  
Fax: +1 952-944-6956

### **European Headquarters:**

Rimage Europe GmbH Albert-  
Einstein-Str. 26  
63128 Dietzenbach  
Germany  
Tel: +49 6074-8521-0  
Fax: +49 6074-8521-100

### **Asia/Pacific Headquarters:**

Rimage Japan Co.,  
Ltd. 2F., WIND Bldg.  
7-4-8 Roppongi Minato-ku,  
Tokyo 106-0032 JAPAN  
Tel: +81-3-5771-7181  
Fax: +81-3-5771-7185

Rimage Corporation reserves the right to make improvements to the equipment and software described in this document at any time without any prior notice. Rimage Corporation reserves the right to revise this publication and to make changes to the content hereof without obligation of Rimage Corporation to notify any person or organization of such revisions or changes.

This document may contain links to web sites that were current at the time of publication, but may have moved or become inactive since. This document may contain links to sites on the Internet that are owned and operated by third parties. Rimage Corporation is not responsible for the content of any such third-party site.

©2014, Rimage Corporation

Rimage® is a registered trademark of the Rimage Corporation. Rimage SDK™ is a trademark of the Rimage Corporation. Rimage Disc Publishing is a division of Rimage Corporation. Dell™ is trademark of Dell Computer Corporation. FireWire™ is a trademark of Apple Computer, Inc.

All other trademarks and registered trademarks are the property of their respective owners.

The most recent version of this document can be found at [www.Rimage.com/support/rimage](http://www.Rimage.com/support/rimage).

# Table of Contents

Table of Contents .....	ii
<b>Important Information .....</b>	<b>iv</b>
Support Contact Information.....	iv
Learn More Online.....	iv
Technical Support.....	v
Optical Disc Recording Software Disclaimer .....	v
<b>Introduction .....</b>	<b>1</b>
Rapid API Features .....	1
Get Started .....	1
<b>Work with the API .....</b>	<b>2</b>
<b>Work with Sessions .....</b>	<b>2</b>
Client Session.....	3
SingleConnectionSession .....	3
Connection.....	3
<b>Work with Listeners .....</b>	<b>3</b>
Listener Callback Options .....	4
<b>Work with Jobs .....</b>	<b>4</b>
Create a Job.....	6
Set Job Data .....	6
Jobs Spanning Multiple Discs .....	6
Set Job Parameters.....	7
Submit a Job.....	7
Durable Jobs .....	8
Monitor Jobs .....	8
Recover Durable Jobs .....	9
Recover Durable Jobs of Client .....	9
<b>Work with Parameters .....</b>	<b>9</b>
<b>Work with Servers .....</b>	<b>10</b>
Work with Server Alerts .....	11
Work with Server Orders .....	12
<b>Memory Management.....</b>	<b>13</b>
Enumerate Objects .....	13
Exception Handling .....	14
<b>Customize the API.....</b>	<b>15</b>
<b>Extend Job Classes.....</b>	<b>15</b>
Job Factory.....	16
<b>Generate Custom Job XML.....</b>	<b>18</b>
Customize ImageOrder XML .....	19
Customize ProductionOrder XML.....	20
XML Writer Factory .....	20
Modifying XML Directly .....	22
Generate Custom Server Request XML.....	22
<b>Samples.....</b>	<b>24</b>

**Deployment ..... 25**

- C++ Deployment .....25
  - Build Information .....25
  - Required Files and Folders .....25
- .NET Deployment.....26**
  - Build Information .....26
  - Required Files and Folders .....26
  - Required .NET Assembly Files .....26
  - 64 Bit Deployment .....27

**Appendix A ..... 28**

- Client ID and Job ID Uniqueness Rules .....28

**Appendix B ..... 29**

- Reference Documentation .....29

# Important Information

## Support Contact Information

US, Canada, Latin America	
<b>Rimage Corporation</b> 7725 Washington Avenue South Minneapolis, MN 55439 USA Attn: Rimage Services	<b>Email:</b> <a href="mailto:support@rimage.com">support@rimage.com</a> <b>Telephone:</b> North America: 800-553-8312 Mexico/Latin America: 952-944-8144 <b>Fax:</b> 952-944-7808
Europe	
<b>Rimage Europe GmbH</b> Albert-Einstein-Str. 26 63128 Dietzenbach Germany	<b>Email:</b> <a href="mailto:support@rimage.de">support@rimage.de</a> <b>Telephone:</b> +49 6074-8521 0 <b>Fax:</b> +49 6074-8521-100
Asia/Pacific	
<b>Rimage Japan Co., Ltd.</b> 2F., WIND Bldg. 7-4-8 Roppongi Minato-ku, Tokyo 106-0032 JAPAN	<b>Email:</b> <a href="mailto:apsupport@rimage.co.jp">apsupport@rimage.co.jp</a> <b>Telephone:</b> +81-3-5771-7181 <b>Fax:</b> +81-3-5771-7185

Contact Rimage Services	
<b>Website:</b> <a href="http://www.Rimage.com/support/rimage">www.Rimage.com/support/rimage</a> <b>Knowledge Base:</b> <a href="http://www.Rimage.com/support/rimage">www.Rimage.com/support/rimage</a> Log in and select the <b>Ask a Question</b> tab	
<b>When you contact Rimage Rimage Services, please provide:</b> <ul style="list-style-type: none"> <li>• System serial number and software version</li> <li>• Functional and technical description of the problem</li> <li>• Exact error message received</li> </ul>	Copy this information from your Rimage product for future reference. <b>Note:</b> Make sure you update the Serial Number here anytime you receive a replacement system. <b>Serial Number:</b> <b>Product Name:</b> <b>Date of Purchase:</b>

## Learn More Online

At [www.Rimage.com/support/rimage](http://www.Rimage.com/support/rimage), you can experience Rimage's world-class Support and Services.

From the <b>Support</b> home page: <ol style="list-style-type: none"> <li>1. Select your product series.</li> <li>2. Select your product.</li> <li>3. Learn more on the product page.</li> </ol>	From your product page you can access: <ul style="list-style-type: none"> <li>• Information about the latest software and firmware updates</li> <li>• Product specifications</li> <li>• The latest documents</li> <li>• Current firmware and driver downloads</li> </ul>
--	--

## **Technical Support**

Support for the Rimage Professional System is available through your authorized reseller.

## **Optical Disc Recording Software Disclaimer**

This Product, Software, or Documentation may be designed to assist you in reproducing material in which you own the copyright or have obtained permission to copy from the copyright owner. Unless you own the copyright or have permission to copy from the copyright owner, you may be violating copyright law and be subject to payment of damages and other remedies. If you are uncertain about your rights, you should contact your legal advisor. If you are neither in possession of the copyright nor have authorization from the owner of the copyright, unauthorized copying of copyrighted material on an optical disc or any other media violates national and international legislation and can result in severe penalties.





## Introduction

Rimage has developed an interface for programmers to integrate their software with the Rimage system quickly and easily. This interface is called the Rapid API, referred to in this document as Rapid API or simply the API.

- The Rapid API is included on the Rimage Software Development Kit (SDK) disc.
- The Rapid API is supported on Windows platforms only.
- The Rapid API supports C++ and all .NET languages.
- This document includes information about the Rapid API, which requires Rimage Software Suite version 8.4 or above.

## Rapid API Features

- The Rapid API eliminates the need for XML creation and parsing - an object oriented interface is presented.
- The Rapid API presents a job level interface encapsulating imaging and production orders – eliminating the need to administer order management details.
- The Rapid API offers the ability to set up either a single or multiple job listeners.
- The Rapid API offers the ability to set up connection listener and server listeners, called session listener.
- The Rapid API can make calls back to the application on the application's main user interface or UI thread or some other UI thread – eliminating problems with updating UI components from a non-UI thread.

---

*Note: .NET 2.0 generates an exception if a UI component is being updated on a non-UI thread.*

---

- The Rapid API offers the ability to extend Job classes to implement functionality not provided by default.
- The Rapid API also offers the ability to customize Job XML to implement functionality not provided by default.

## Get Started

---

*Note: Before you install the Rapid API, Rimage Software Suite 8.4 or later must be installed on the PC connected to the Rimage autoloader (the Control Center).*

---

1. Install the Software Development Kit.
2. Open sample project(s) and run sample program(s) to familiarize yourself with the Rapid API and the programming environment. Sample programs are located in C:\Users\Public\Documents\Rimage\RimageSDK\Samples\RapidApi by default. Select the appropriate project type and open the project in Visual Studio 2013. Refer to [Samples](#) on page 24 for more information
3. Create a program to publish your first disc by implementing the following:

---

*Note: These steps are shown in the "Hello World" samples.*

---

- a. **Set up a session listener – this is an optional step.**  
`SingleConnectionSession.GetInstance().SetSessionStatusListener()`
- b. **Set up a default job listener – this is an optional step.**  
`SingleConnectionSession.GetInstance().SetDefaultJobListener()`
- c. **Establish a connection to a Messaging Server.**  
`SingleConnectionSession.GetInstance().Connect()`
- d. **Create a Job.**  
`Job job = SingleConnectionSession.GetInstance().CreateImageAndRecordJob()`

- e. **Set Job parameters.**  
`job.AddParentFolder() job.SetLabelFile()`
- f. **Submit a Job.**  
`SingleConnectionSession.GetInstance().SubmitJob()`
- g. **Receive Job statuses if listeners were set up.**  
`IJobStatusListener.OnJobStatus() // callback`
- h. **Disconnect from the messaging server.**  
`SingleConnectionSession.GetInstance().Disconnect()`

## Work with the API

This Programming Guide gives an overview of the classes in the Rapid API. For much more detailed information access the HTML help files located by default, in C:\Program Files (x86)\RimageSDK\ApiSdk\doc.

---

*Note: This document uses \Program Files\ and \Program Files (x86)\ as part of the installation path. The former is for 32 bit Windows installations and the latter is for Windows 64.*

---

Begin working with the API by creating a Rimage session (**SingleConnectionSession** class), which encapsulates a connection to the Rimage Messaging server with your application. A connection is represented by the **Connection** class. Refer to [Work with Sessions](#) on page 5 for more information.

---

*Note: A connection to Messaging Server is needed in order to process jobs, manage servers, and receive system notifications.*

---

Set up **Job** and **Session** listeners for your application to be asynchronously notified of job statuses, server alerts, etc. These listeners can be set up before a connection is established. An application can implement the **ISessionStatusListener** interface, **IJobStatusListener** interface, or both and pass the objects to the **SingleConnectionSession** class. Refer to [Work with Listeners](#) on page 6.

---

*Note: An application is not required to set up listeners.*

---

Job class hierarchy represents the heart of the Rapid API. A **Job** class encapsulates the details of submitting, processing, and receiving job statuses through the **JobStatus** class. The caller creates an appropriate type of job, sets data paths and parameters, and submits the job. Refer to [Work with Jobs](#) on page 7.

---

*Note: It is possible to create a job object and set job object parameters without establishing a connection to the Rimage Messaging server. A Messaging server connection must exist in order for an application to submit a job.*

---

Rapid API maintains objects representing Rimage servers that are available for processing jobs. Servers can be accessed through the **SingleConnectionSession** or **Connection** classes. Servers allow server settings to be changed and read, server state changes, and iterating through current alerts. Refer to [Work with Servers](#) on page 12.

---

*Note: An application is not required to work with servers.*

---

## Work with Sessions

To begin working with the Rapid API, initiate a client session with the Rimage system. A session object is created and the application maintains a reference to only one session object. Through the session object, the application can manage jobs (create, submit, retrieve, etc.), connections, servers and server alerts, and set listeners.

## Client Session

The **ClientSession** class is the base class for all sessions. This class is never instantiated directly. It exposes methods that are common to all types of sessions, such as job creation, enumerating over jobs, servers, and alerts, and setting job and session listeners.

Session type specific methods, such as submitting a job for processing, are exposed by **ClientSession** subclasses. A subclass' `GetInstance()` static method is called to get an instance of a session - this is the starting point of working with the Rapid API.

---

*Note: Currently Rapid API offers only one ClientSession subclass – SingleConnectionSession.*

---

## SingleConnectionSession

**SingleConnectionSession** is currently the only subclass of **ClientSession**. The Rapid API supports a connection to only one messaging server at any one time. The client application is free to connect and disconnect from any number of messaging servers on the network, but it can be connected to only one at a time.

To get an instance of a single connection session, use the static method `SingleConnectionSession.GetInstance()`. Rimage recommends the client application always accesses **ClientSession** and **SingleConnectionSession** through `SingleConnectionSession.GetInstance()` method. For example:

- **C++:** `SingleConnectionSession::GetInstance()->Connect()`
- **C#:** `SingleConnectionSession.GetInstance().Connect()`

---

*Note: SingleConnectionSession class inherits all the ClientSession methods which eliminates the need to hold onto a reference to ClientSession class.*

---

## Connection

**Connection** class encapsulates information about a connection to the messaging server and allows operations that are specific to this connection such as enumerating servers connected to the same messaging server or submitting a job to those servers. The **Connection** class also offers information methods about the connection itself, such as messaging host and port currently connected to, client ID, and Rimage system folder.

---

*Note: A Connection object is automatically created when `ConnectionSession.Connect()` method is called.*

---

## Work with Listeners

The client application can asynchronously receive two types of events, job status events and session events. Job status events notify the application about the progress of a specific job. Session events include server alerts, connection drops, and server state changes.

1. The client application implements the listener interfaces.

```
class SampleUserJobListener : IJobStatusListener { }
class SampleUserSessionListener : ISessionStatusListener { }
```

2. And gives the listener object references to the Rapid API.

```
SingleConnectionSession.SetDefaultJobListener()
SingleConnectionSession.SetSessionStatusListener()
```

3. Statuses are asynchronously delivered to the application through the listener objects when they arrive.

- An application can remove the listeners at any time.

```
SingleConnectionSession.RemoveDefaultJobListener()
SingleConnectionSession.RemoveSessionStatusListener()
```

---

*Note: An application can also set up job status listeners on individual job objects. If the default listener and a specific job listener are set, then all statuses for that job are received twice by the application – once by the default listener and once by the job specific listener.*

---



---

*Important! Client application methods that implement the **ISessionStatusListener** and **IJobStatusListener** interfaces should not throw exceptions back to the API. If an exception is thrown, it is logged and the API continues to process without notifying the user.*

---

## Listener Callback Options

Listener objects are called by the Rapid API on a thread. The client application has control over which thread is used when its listener objects are called by the API. The application specifies its intention when it sets up the listener. A listener can be called back on one of three different threads:

- Application's main UI thread – this is the most common option for UI applications. This eliminates a potential issue with updating UI components from a non-UI thread. Also, most UI applications have only one UI thread – the main application thread. To be called back on the main UI thread, setup the listener like this:

```
SingleConnectionSession.SetDefaultJobListener( IJobStatusListener ,
CallbackOnMainUIThread.True )
```

- An application's UI worker thread – in some cases an application creates a UI worker thread. The Rapid API needs the UI worker thread's ID and calls the listener back on this thread. To be called back on a UI worker thread, setup the listener like this:

```
SingleConnectionSession.SetDefaultJobListener( IJobStatusListener ,
CallbackUIThreadId )
```

- Rapid API thread – in cases when there is no UI thread, or the application does not update a UI component with status information, it may be more advantageous to receive listener events on a worker thread. This is recommended for console applications. To be called back on the Rapid API's thread, setup the listener like this:

```
SingleConnectionSession.SetDefaultJobListener( IJobStatusListener ,
CallbackOnMainUIThread.False )
```

## Work with Jobs

The main purpose of the Rimage publishing system is to record discs with data and print labels on those discs. This process is facilitated by the Imaging and Production servers. Sometimes other applications are required, such as imaging data to an image file to be recorded on a disc at a later time, or printing a label on a previously recorded disc. Rapid API accommodates all of these scenarios by providing three basic types of Job classes.

- ImageAndRecordJob** is the most common type of job that images and records data and optionally prints a label. This type of job utilizes both Imaging and Production servers.
- ImageOnlyJob** is the job type that creates an image file to be recorded on a disc at a later time. This type of job utilizes only the Imaging server.
- ProductionOnlyJob** exists for recording an existing image file on disc, printing a label on an existing disc, or to make an audio CD which requires no prior imaging. This type of job utilizes only the Production server.

The Job class hierarchy can be divided into three levels:

- First level consists of the **Job** base class from which all job classes inherit. This class exposes methods common to

all types of jobs, such as job ID and common parameters.

2. Second level consists of **ImageAndRecordJob**, **ImageOnlyJob**, **ProductionOnlyJob** – these classes encapsulate the types of Rimage jobs discussed above. This level of classes expose all methods necessary for a job type. These classes implement the **IImageOptions** interface, the **IProductionOptions** interface, or both interfaces.

☐

3. Third level consists of specific job type classes which represent the most common types of Rimage jobs. These job classes have default parameter values to match their specific types. Refer to the [Job Parameter Defaults](#) table on page 10 for more information. For example, the default media type for a **UDFJob** is DVDR, but the default media type for an **ISOJob** is CDR.

The above diagram also shows two key interfaces: **IImageOptions** and **IProductionOptions**. These interfaces specify the contract for jobs that are processed by Imaging server, Production server, or both.

**IImageOptions** interface exposes methods for specifying data to be imaged as well as settings which control how that data is to be imaged, for example, ISO Level 2 or UDF Version 1.02.

**IProductionOptions** interface contains methods that allow specification of information such as the label file and the list of audio or data tracks, to record on the disc. It also allows specification of production settings such as media type and number of copies.

Second level classes that implement the **IImageOptions** interface are **ImageAndRecordJob** and **ImageOnlyJob** because both of these job types involve the imaging of data.

Second level classes that implement the **IProductionOptions** interface are **ImageAndRecordJob** and **ProductionOnlyJob** because both of these job types use Production server to record a disc.

## Create a Job

Job objects can be created from job classes of the second and third levels. The first level Job base class is declared abstract.

To create a specific type of job, use one of the following methods:

```
ImageAndRecordJob ClientSession.CreateImageAndRecordJob(JobType)
ImageOnlyJob ClientSession.CreateImageOnlyJob(JobType)
ProductionOnlyJob ClientSession.CreateProductionOnlyJob(JobType)
```

The JobType parameter tells the API which job to create. If the JobType parameter is specified as a third level type, such as UDFJobType, then the caller is required to cast the returned reference to the correct type. For example:

C++

```
UDFJob* job = (UDFJob*)SingleConnectionSession::GetInstance()->
CreateImageAndRecordJob(UDFJobType)
```

C#

```
UDFJob job = (UDFJob)SingleConnectionSession.GetInstance().
CreateImageAndRecordJob(JobType.UDFJobType)
```

## Set Job Data

After a job is created, setup the data and change any related settings. Communicate to the Rimage system which data to record on the disc. For **ImageAndRecordJob** and **ImageOnlyJob** this is accomplished with the AddParentFolder() method. An Editlist is specified by calling the AddEditList() method. Multiple parent folders and Editlists can be given to a job.

For a **ProductionOnlyJob** an image file must be specified with the AddDataTrack() method. Multiple data tracks can be recorded on a disc. For an audio job, AddAudioTrack() can be called multiple times.

The SetLabelFile() method is available on **ImageAndRecordJob** and **ProductionOnlyJob** to communicate to the API which label to print on the disc.

When a file is given to the API, (e.g. AddParentFolder()) a second parameter of type ConvertToUNC enum is passed in. This parameter tells the API whether or not to convert the file path to a UNC path so it is accessible from the network.

For example:

If C:\Rimage is the parent folder path, this folder is shared as Rimage, and the second parameter is **ConvertToUNC.True**, then the path \\<computername>\Rimage is given to the server. This is useful when the Rimage servers are running on other computers on the network.

Some data, such as a parent folder or label file, have parameters that are specific to the data. Set and Get methods exist which take the *original* path given to the API as the first parameter and a key/value pair for the rest. For example:

```
void SetLabelFileParam(String labelFile, LabelFileParamType key, String value)
String GetLabelFileParam(String labelFile, LabelFileParamType key)
```

Refer to [Work with Parameters](#) on page 12.

## Jobs Spanning Multiple Discs

If the data specified for an ImageAndRecordJob is too large for the specified media - more than 750MB for CDR, or more than 4.3GB for DVDR, etc. - Rimage Imaging and Production servers can produce multiple discs for that job, spanning the data across the discs.

To allow the Rimage system to span discs for a job, set the AllowSpanning property to true. By default this property

is false.

C++

```
void ImageAndRecordJob::AllowSpanning(bool value)
bool ImageAndRecordJob::IsSpanning()
```

C#

```
ImageAndRecordJob.AllowSpanning { bool get(); void set(bool) }
```

### Set Job Parameters

The remaining job settings are divided into three categories:

- **Common job settings** are managed with SetJobParam() and GetJobParam(). These settings encompass parameters that are common to all job types.
- **Imaging job settings** are managed with SetImageParam() and GetImageParam(). These methods are specified by the **ImageOptions** interface and are implemented by the **ImageAndRecordJob** and **ImageOnlyJob** classes.
- **Production job settings** are managed with SetProductionParam() and GetProductionParam(). These methods are specified by the **IProductionOptions** interface and are implemented by the **ImageAndRecordJob** and **ProductionOnlyJob** classes.

Refer to [Work with Parameters](#) on page 12.

### Job Parameter Defaults

When a third level job class is created, parameters are set to the most reasonable default values for the created job type. The following table lists the default settings for all the third level jobs.

ImageAndRecordJob	Defaults
ISOJob	Image format = ISO Level 2, Media type = CDR
UDFJob	Image format = UDF Version 1.02, Media type = DVDR
HybridJob	Image format = ISO Level 2, HFS, Media type = CDR
BlueBookJob	Image format = ISO Level 2, Media type = CDR
HFSJob	Image format = HFS, Media type = CDR
ImageOnlyJob	Defaults
ISOImageOnlyJob	Image format = ISO Level 2
UDFImageOnlyJob	Image format = UDF Version 1.02
HybridImageOnlyJob	Image format = ISO Level 2, HFS
HFSImageOnlyJob	Image format = HFS
ProductionOnlyJob	Defaults
AudioJob	Media type = CDR
LabelOnlyJob	Media type = CDR
BlueBookFromImageJob	Media type = CDR
FromImageJob	Media type = CDR
ReadJob	No defaults required

### Submit a Job

To submit a job for processing, the application simply calls

```
void SingleConnectionSession.SubmitJob(Job)
```

The Rapid API validates parameters set on the job for correctness before it sends the job out to the servers for processing. Validation includes:

1. Checking for incorrect parameter values.
2. Checking for incompatible parameter combinations. For example ISO and UDF format settings cannot coexist

in a single job – it's either a UDF job or an ISO job.

## Durable Jobs

To submit a job so its status can be recovered after a crash use

- C++: `SingleConnectionSession::SubmitDurableJob(Job)`
- .NET: `SingleConnectionSession.SubmitDurableJob(Job)`

This ensures that the client application using the Rapid API never loses job statuses, even in case of a crash or network disconnect.

Refer to the [Recover Durable Jobs](#) section on page 11 for more information.

## Monitor Jobs

Each **Job** object holds onto a **JobStatus** object which represents the current status of the job at all times, even before a job is submitted. To access the **JobStatus** object call

C++

```
JobStatus Job.GetStatus()
```

To access the current state of the job call

C++

```
JobStateType JobStatus.GetState()
```

.NET

```
Job.Status
```

```
JobStatus.State
```

A job is in one of the following states at any one time

```
JobNotStarted
```

```
JobSubmittedForImaging
```

```
JobSubmittedForProduction
```

```
JobInProgress
```

```
JobCompleted
```

```
ed
```

```
JobCancelled
```

```
ed
```

```
JobFailed
```

**JobStatus** contains other information such as percent completed, error code and error message in case of failure, IDs of the servers processing the job, etc. The application is free to access the **JobStatus** object for a job at any time.

Another way to monitor job progress is to set up job listeners. If a listener is set up, a default listener or a job specific listener, the application is notified asynchronously with a callback to the `IJobStatusListener.OnStatus()` method every time the status changes. The job ID and a reference to the **JobStatus** object for that job are passed into the callback method.

---

***Important!** The application should not hold onto a Job Status reference passed into the callback. It should retrieve the JobStatus reference from the Job object every time. The JobStatus object in this case is temporary and may be out of scope as soon as the callback method ends.*

---

### Notes:

- It is much more efficient to be notified through a listener versus polling for job status proactively.
- Finished jobs can be removed from the Rapid API's cache by calling `ClientSession.RemoveFinishedJobs()`. For durable jobs, this also deletes the durable job files stored in the `"MyDocuments\MyRimage\DurableJobs"` folder.



## Recover Durable Jobs

In case of an application crash or shutdown, or a network problem during job processing the flow of current job statuses is interrupted. To recover missed job statuses, the application needs to call:

C++:

```
SingleConnectionSession::RecoverDurableJobs() Connection::RecoverDurableJobs()
NET:
```

```
SingleConnectionSession.RecoverDurableJobs() Connection.RecoverDurableJobs()
```

at next startup or reconnect to the Rimage system.

This sends stored job statuses to the client application. Rapid API internally creates all the recovered Job and JobStatus objects. If the client application sets up a default JobStatusListener before calling RecoverDurableJobs() then recovered job statuses are sent to the listener.

Session class method RecoverDurableJobs() recovers all durable jobs, not only the jobs for the Connection that was just made to Rimage. Connection class method RecoverDurableJobs() only recovers durable jobs that were submitted previously by this Connection.

## Recover Durable Jobs of Client

This is similar to the previous Recover Durable Jobs methods except that it allows the client to be specified.

In the case of an application crash, shutdown, or a network problem during job processing the flow of current job statuses is interrupted. To recover missed job statuses for a specific client the application can call:

C++:

```
SingleConnectionSession::RecoverDurableJobsOfClient(LPCTSTR ClientId)
Connection::RecoverDurableJobsOfClient()
```

NET:

```
SingleConnectionSession.RecoverDurableJobsOfClient(String ClientId)
Connection.RecoverDurableJobsOfClient()
```

at next startup or reconnect to the Rimage system.

This sends stored job statuses to the client application. Rapid API internally creates all the recovered Job and JobStatus objects. If the client application sets up a default JobStatusListener before calling RecoverDurableJobs() then recovered job statuses are sent to the listener.

Session class method RecoverDurableJobsOfClient() recovers all durable jobs for the specified client, not only the jobs for the Connection that was just made to Rimage. Connection class method RecoverDurableJobsOfClient() only recovers durable jobs that were submitted previously by this Connection.

If ClientId is null, then the function acts like RecoverDurableJobs and gets statuses for all clients.

## Work with Parameters

Throughout the Rapid API one encounters methods of this pattern

```
void SetSomethingParam(EnumType key,String value)
String GetSomethingParam(EnumType key)
```

The API groups similar parameters for **Job** or **Server** classes, into categories. Each category is represented by setter and getter methods as well as by an enumerated type. The enumerated type encapsulates the possible parameters for the category. For example the **IImageOptions** interface has the following methods using the

**ImagingTargetParamType** enumerated type.

```
void SetImageParam(ImagingTargetParamType key, String
param) String GetImageParam(ImagingTargetParamType key)
enum ImagingTargetParamType {
TargetImagingClusterParam
TargetImagingServerParam
LastImagingTargetParamType };
```

---

*Note: Every enumerated type ends with a delimiter value in the pattern: "Last<enumname>ParamType" – LastImagingTargetParamType in the above example. This enumerated value is for internal use only.*

---

The value of the parameter, whether set or retrieved, is always represented by a string type (LPCTSTR in C++ and System.String in .NET). Some parameter values are just text, such as the

**ImagingTargetParamType.TargetImagingServerParam** which requires the ID of a server.

Other parameters only accept values in a specific set, such as **FormatParamType.ISOLevelParam** which only accepts none, 1, or 2. Constants exist for all predefined values. For this example they are:

C++

```
FORMAT_ISO_NONE
FORMAT_ISO_9660_L1
FORMAT_ISO_9660_L2
```

.NET

```
JobParamValues.FormatISONone
JobParamValues.FormatISO_9660_L1
JobParamValues.FormatISO_9660_L2
```

Other parameters only accept true or false, such as **FormatOptionParamType.ForceUpperCaseParam**. Predefined constants exist for these values as well:

C++

```
RAPID_TRUE
RAPID_FALSE
```

.NET

```
ParamValues.True
ParamValues.False
```

Rapid API validates parameter values as soon as possible. If a parameter value for a specific parameter doesn't match the allowed set of values, an exception is thrown to the application. This pattern of setting and getting parameters allows the Rapid API to keep the number of class methods small.

---

*Note: For a detailed explanation of all enumerated types and appropriate values, access the HTML help files located, by default, in C:\Program Files (x86)\RimageSDK\ApiSdk\doc.*

---

## Work with Servers

When the client application connects to a messaging server, the Rapid API starts collecting information about Rimage servers on behalf of the application. Server objects are never instantiated by the client application, instead they are created by the API when a specific server is detected online. The server objects represent either the Imaging or the Production servers available on the network. The application is notified of server state change events if a session status listener is set up.

The **Server** classes expose server related interfaces available to the client application. The application can pause and resume a server, retrieve server information, change server settings, and much more.

**Server** objects can be enumerated by initializing an iterator with either **ClientSession** or **Connection** objects. Refer to [Enumerate Objects](#) on page 15.

**Server** objects also keep track of alerts currently active on a Rimage server. Alerts represent warning and error conditions, such as out of discs, recording failure, etc. Refer to [Work with Server Alerts](#) on page 14.

An application can also query a server for a list of orders currently in process on that server. Refer to [Work with Server Orders](#) on page 14.

**Server** is a base class for two concrete server types – **ImagingServer** and **ProductionServer**. The subclasses inherit all the **Server** methods as well as offering specific methods for each server type.

- **ProductionServer** class extends the **Server** class and adds functionality specific to the Production server. It allows the caller to get information about disc input and output bins, recorders, printers, and to change Production specific settings.
- **ImagingServer** class extends the **Server** class and adds functionality specific to the Imaging Server, such as retrieving Imaging server specific information. Refer to [Work with Parameters](#) on page 12.

---

*Note: Offline servers can be removed from the Rapid API's cache by calling `ClientSession.RemoveOfflineServers()` or `Connection.RemoveOfflineServers()`.*

---

## Work with Server Alerts

A server alert represents a warning or an error condition encountered by a server. Most of the alerts require a user action, such as putting more discs in the input bin of an autoloader. Some alerts can be answered programmatically.

A **ServerAlert** object is attached to a **Server** object by the API when it is generated by a Rimage server. The application is notified of a new or acknowledged alert if a session status listener is set up.

**ServerAlert** objects can be enumerated by initializing an iterator with either a **ClientSession** or a **Server** object. Refer to [Enumerate Objects](#) on page 15.

The typical application handles alerts in the following way:

1. A server sends out an alert.
2. The client application receives notification of the alert in `SessionStatusListener.OnServerAlert()` callback method.
3. The client application displays the alert in a dialog. The dialog shows buttons with corresponding strings received from `ServerAlert.GetNumReplies()` and `ServerAlert.GetReplyText()` methods.
4. An operator resolves the alert condition (places more blank discs in the input bin for example).

5. The operator clicks on one of the buttons which triggers a call to reply to one of the server's alerts. There are three methods to choose from to reply to a `ServerAlert`:
  - `ReplyWithActionId()` is the preferred method. This allows the caller to pass in a unique action ID for that specific reply. For a finite set of action IDs in the Rimage system, refer to Server Alert Action IDs located at `C:\Program Files (x86)\RimageSdk\Manuals\Programming Guides\Server Alert Action IDs Reference.pdf`. An Action ID can be retrieved from an alert by calling `GetReplyActionId(int index)`.
  - `ReplyWithText()` method allows the caller to pass in the same string as the one displayed on the button. The text string can be retrieved from an alert by calling `GetReplyText(int index)`.
  - `ReplyWithIndex()` method allows the caller to pass in the index of the reply, starting with index 0.
6. The server receives the reply, checks that the condition has been fixed, and sends out an alert acknowledgement.
7. Rapid API updates the status of the `ServerAlert` object.
8. The client application receives the alert acknowledgement through the `SessionStatusListener.OnServerAlert()` method with `AlertAcknowledged` value.

---

*Note: Acknowledged alerts can be removed from the Rapid API's cache by calling `Server.RemoveAcknowledgedAlerts()` or `ClientSession.RemoveAcknowledgedServerAlerts()`.*

---

## Work with Server Orders

Server classes allow you to work with any orders that are currently active on a certain server. These orders are submitted by a client application on the network, this may include orders submitted by client applications other than your own.

Orders are represented by **ServerOrder** base class and **ImagingOrder** and **ProductionOrder** subclasses.

Server orders are attached to a **Server** object by the API after an application makes a call to `Server.RefreshInfo(ServerInfo.RefreshType.RefreshActiveOrders)` method. Information that a client application retrieves from server orders is similar to the information obtained from a **JobStatus** object, such as ID, percent completed, copies completed, etc. **ServerOrder** objects can be enumerated by initializing an iterator with a **Server** object. You can also retrieve a list of orders that are pending to be processed. To do this call

C++:

```
Connection::InitPendingOrderIterator()
```

.NET:

```
Connection.GetPendingOrders()
```

This call allows you to retrieve pending orders on a combination of specific connection and cluster. The rest of the parameters let you filter the list even further. You can specify a combination of the following filters:

- **clientId** - limit the list to orders authored by a specific client application
- **serverId** - limit the list to orders targeted to a specific server
- **maxOrders** - limit the number of orders in the returned list
- **targetedOrdersOnly** - specifies if the returned orders are only ones targeted to a specific server or not targeted at all. You can also call

C++:

```
Server::InitPendingOrderIterator()
```

.NET:

```
Server.GetPendingOrders()
```

to limit the list to orders targeted to the server object you're using. The parameters for this method have the same meanings as the parameters above.

## Memory Management

The caller never uses the new operator to create instances of any of the Rapid API's classes. To create a **Job** object, Rapid calls one of three methods: **CreateImageOnlyJob()**, **CreateProductionOnlyJob()**, or **CreateImageAndRecordJob()**. The method called then calls Job Factory class(es) to create jobs. A **JobStatus** object is created by the **Job** class, **Server** and **ServerAlert** objects are instantiated by the API, etc.

The application almost never calls the delete operator on the API objects because Remove\*() methods exist on various classes. Examples include ClientSession.RemoveAcknowledgedServerAlerts() and ClientSession.RemoveFinishedJobs(). It is also possible to delete a specific finished job by calling ClientSession.RemoveJob().

When an application disconnects from the Messaging Server, the **Server** and **ServerAlert** objects are removed. **Job** objects are not removed. The reason **Job** objects are not removed is that the same **Job** object can be processed on one messaging connection and then submitted for processing on a new connection if the application disconnects from the first connection and then connects to a different Messaging Server.

## Enumerate Objects

Rapid API instantiates objects on the caller's behalf and maintains lists of those objects internally. The API offers a way for the client application to retrieve references to those objects, such as a **Job** or **Server** object.

Various classes have methods to retrieve an object by its ID. Examples include Connection.GetServer() and Server.GetAlert(). The fastest way to retrieve an object, such as an Alert or Server object, is to use the ID.

If however an application needs to list all objects of a certain type, such as **Jobs** or **ServerAlerts** for a specific **Server**, then it can use various classes to initialize an iterator and enumerate over the whole list.

---

*Note: The term Enumerator is used to match .NET terminology.*

---

In C++, the caller initializes an Iterator of a specific type by using one of the Init\*Iterator() methods on the classes that offer iterator functionality, such as **ClientSession**. Once an **Iterator** object has been initialized, the application can list all of the objects by calling Iterator.Next() in a loop. In C#, or any other .NET language, the call to a Get\*s() method is made, such as ClientSession.GetServers(). This method returns an object which implements the IEnumerable<T> interface.

This enables the use of the C# 'foreach' construct ('For Each' in Visual Basic). The enumerator can be obtained as well by calling IEnumerable<T>.GetEnumerator() method.

---

*Note: An initialized Iterator is like a snapshot in time. For example, if a new Server object is created by the API while the caller is enumerating Server objects, the new object is not retrieved by the Iterator.*

---

---

*Important! Calling one of the Remove\*() methods to delete objects on one thread while enumerating the objects being removed on another thread can result in a null pointer or a null reference exception.*

---

**Example: Enumerate over Job Objects**

C++:

```

JobIterator iter;
SingleConnectionSession::GetInstance()->InitJobIterator(iter);
while ( iter.HasMore() )
{

```

C#:

```

Job job = iter->Next();
}
foreach(Job job in SingleConnectionSession.GetInstance().GetJobEnumerator())
{
    // Work with the job object
    string jobId = job.JobId;

```

**Exception Handling**

Most Rapid API methods throw an exception in case of an error, whether it's a connection related error or a parameter validation error. The type of the exception thrown is always **RimageException**. It is recommended that calls to the API methods are always wrapped in a try catch block as shown in this example:

C++

```

try
{
    SingleConnectionSession::GetInstance()->Connect(
        "client1", "localhost", "2506");
}
catch ( RimageException &re )
{
    // Rapid API error occurred
    LPCTSTR error = re.GetErrorMessage();
    int errorCode = re.GetErrorCode();
}
catch ( . . . )
{
    // anything else
}

```

C#

```

try
{
    SingleConnectionSession.GetInstance().Connect(
        "client1", "localhost", "2506");
}
catch ( RimageException re )
{
    // Rapid API error occurred
    string error = re.Message;
    int errorCode =
        re.ErrorCode;
}
catch ( Exception se )
{
    // anything else
}

```

## Customize the API

The functionality offered by the Rapid API is sufficient for most applications. There are times however when an application needs to do something different than what the API offers out of the box. Several options are available.

1. Customizing a job by extending one of the **Job** classes. For example, setting all job parameters in the constructor of the derived class to avoid polluting the application code.
2. Extending an **XMLWriter** class to generate custom XML. This is useful when the provided **Job** classes don't offer certain functionality, such as specifying a sub index for audio tracks.

---

*Note: The data and settings are converted to one or two XML orders before the job is submitted for processing.*

---

3. Combination of 1 and 2.
4. Extending XML writer class to generate custom XML for a server request.

---

*Note: Almost all server operations are covered by the API out of the box.*

---

## Extend Job Classes

Only the second and third level **Job** classes can be extended by a client application. If an application needs functionality that is significantly different from what is offered by the third level classes, then it may make sense to extend the second level **Job** classes. Refer to [Work with Jobs](#) on page 7 for more information on the **Job** class.

---

*Note: Second level classes perform less validation than the third level classes because the job types are less specific at the second level.*

---

When a **Job** derived class is extended by the client application, almost every method is available for override because most methods in the **Job** hierarchy are declared virtual.

A common reason for extending a **Job** class is to encapsulate the initialization in the subclass' constructor. Any data or parameter setting method can be called from the constructor of the derived class.

---

*Note: For reasons specific to the .NET Rapid API implementation, the derived class' constructor needs to be left blank. Instead, a virtual method Initialize() is available for this purpose.*

---

### Example: Extend a Job class

C++

```
class SampleUserJob : public ISOJob
{
public:
    SampleUserJob()
    {
        SetImageParam(IsJolietParam, RAPID_TRUE);
        SetProductionParam(CopiesParam, "5");
        SetProductionParam(MediaTypeParam, MEDIA_TYPE_DVDR_DL);
    }
    virtual ~SampleUserJob() {}
};
```

C#

```

class SampleUserJob : ISOJob
{
    public SampleUserJob() {} // needs to be left blank
    public override void Initialize()
    {
        SetImageParam(FormatParamType.IsJolietParam, ParamValues.True);
        SetProductionParam(ProductionJobParamType.CopiesParam, "5");
        SetProductionParam(ProductionJobParamType.MediaTypeParam,
            JobParamValues.MediaTypeDVDR_DL);
    }
}

```

The UML diagram to the right illustrates the above example. The diagram also shows another key class involved in job customization, **IJobFactory** interface.

## Job Factory

Once you write your class you must instantiate it at runtime. To instantiate a custom class, Rapid API requires access to a **Job** object factory.

Rapid API internally uses a default job factory to create existing **Job** objects. To create a user defined **Job** object, the API requires a user defined **Job** factory. The client application implements the **IJobFactory** interface and gives the custom factory to the API.

When a ClientSession.Create\*Job() method is called by the application, a job type is passed in. If the job type is one of the user types, the custom job factory is called instead of the default to create an appropriate object.

Twenty-four custom job types can be created by an application. They are listed below:

- UserImageAndRecordJobType1 through UserImageAndRecordJobType8 for **Job** classes extended from the **ImageAndRecordJob** or its descendants.
- UserImageOnlyJobType1 through UserImageOnlyJobType8 for **Job** classes extended from the **ImageOnlyJob** or its descendants.
- UserProductionOnlyJobType1 through UserProductionOnlyJobType8 for **Job** classes extended from the **ProductionOnlyJob** or its descendants.

**IJobFactory** interface has two methods that need to be implemented

- Job CreateJob(JobType) creates the custom job by using a new operator.
- bool RemoveJob(Job) uses the delete operator to remove the custom job.



---

*Note: Unless there are native resources to release or delete, the RemoveJob() method doesn't need to do anything.*

---

### Example: Implementing a Job Factory

C++:

```
class SampleUserJobFactory : public IJobFactory
{
public:
    SampleUserJobFactory(){}
    virtual ~SampleUserJobFactory()
    {} Job* CreateJob(JobType type)
    {
        if ( type == UserImageAndRecordJobType1 )
        {
            return new SampleUserJob();
        }
        return NULL; // not created by custom factory
    }
    bool RemoveJob(Job *job)
    {
        if ( job != NULL && job->GetJobType() == UserImageAndRecordJobType1 )
        {
            delete job;
            return true; // removed
        }
        return false; // not removed by custom factory
    }
};
SingleConnectionSession::GetInstance()->SetUserJobFactory(
new SampleUserJobFactory());
```

C#

```
class SampleUserJobFactory : IJobFactory
{
    public SampleUserJobFactory() {}
    public Job CreateJob(JobType
    type)
    {
        if ( type == JobType.UserImageAndRecordJobType1 )
        {
            return new SampleUserJob();
        }
        return null; // not created by custom factory
    }
    bool RemoveJob(Job job)
    {
        return true; // garbage collector will clean up the Job
    }
}
SingleConnectionSession.GetInstance().SetUserJobFactory(
new SampleUserJobFactory());
```

**IJobFactory2** is an alternative interface available for C++ users. This interface is derived from IJobFactory and has the added method GetClassNameOfType() to aid reading durable Job XML when a custom job is created. C++ users can choose either the IJobFactory interface or the IJobFactory2 interface.

## Generate Custom Job XML

Custom XML generation is available when more functionality is required beyond extending specific Job classes. The Rimage system processes every submitted job according to one or two XML orders – an Imaging order, a Production order, or both. Imaging orders are specified by the ImageOrder DTD and Production orders are specified by the ProductionOrder DTD.

---

*Note: DTDs are located in the Rimage system folder, C:\Rimage\XML by default.*

---

The Rapid API allows you to extend the ImageXmlWriter class, the ProductionXmlWriter class, or both.

---

*Note: The API also allows custom Job classes to coexist with custom XML generation.*

---

⌘

This diagram shows the XML writer class hierarchy. The base class is **XmlWriter**. This class exposes methods common to all types of DTDs such as setting and getting DTD version and path information. It also exposes a virtual method called FormatXml() which is the entry point into XML generation. Subclasses of **XmlWriter** implement this method to generate XML specific to their type.

**XmlWriter** class implements the FormatXml() method in the following way:

```
void XmlWriter.FormatXml()
{
    FormatDocType(GetStringBuffer());
    FormatRootElement(GetStringBuffer()); // implemented by a
    subclass FormatDetails(GetStringBuffer()); // implemented by a
    subclass FormatCloseRootElement(GetStringBuffer());
}
```

**XmlWriter** class has a protected member `GetStringBuffer()`. This method allows access to the **XmlStringBuffer** object which makes generating XML simple. **XmlStringBuffer** class offers methods such as `WriteStartElement()` and `WriteAttribute()` which take care of XML formatting details allowing the programmer to concentrate on the business logic. This buffer is passed into every formatting method.

Two **XmlWriter** subclasses - **ImageXmlWriter** and **ProductionXmlWriter** – are used by the Rapid API to generate job related XML. To customize XML generation for jobs, extend **ImageXmlWriter** and **ProductionXmlWriter**. The **ImageXmlWriter** class generates an ImageOrder XML string and the **ProductionXmlWriter** generates a ProductionOrder XML string.

## Customize ImageOrder XML

`ImageXmlWriter.FormatDetails()` writes elements and attributes which govern how the image is created. The body of the method looks like this:

```
void ImageXmlWriter.FormatDetails(XmlStringBuffer xmlStrBuffer)
{
    AddTarget(xmlStrBuffer);
    AddFormat(xmlStrBuffer);
    AddSource(xmlStrBuffer);
    AddOutput(xmlStrBuffer);
    AddRules(xmlStrBuffer);
    AddVolumeName(xmlStrBuffer);
    AddPVDInfo(xmlStrBuffer);
    AddControls(xmlStrBuffer);
    AddCustomize(xmlStrBuffer);
}
```

The `ImageXmlWriter.FormatDetails()` method is declared virtual which allows it to be completely overwritten. In most cases only a certain element needs to be changed. In those cases it is sufficient to overwrite only one of the methods that is called from the `FormatDetails()` method, such as `AddFormat()`. For example:

C++

```
class SampleUserImageXmlWriter : public ImageXmlWriter
{
public:
    SampleUserImageXmlWriter(){}
    virtual ~SampleUserImageXmlWriter() {}
    void AddFormat(XmlStringBuffer &xmlStrBuffer)
    {
        // custom code here
    }
};
```

C#

```
class SampleUserImageXmlWriter : ImageXmlWriter
{
public SampleUserImageXmlWriter(){}
protected override void AddFormat(XmlStringBuffer xmlStrBuffer)
{
    // custom code here
}
};
```

---

**Note:** Refer to the ImageOrder DTD located at `C:\Program Files (x86)\RimageSDK\ApiSdk\XML for the ImageOrder format details`.

---

## Customize ProductionOrder XML

ProductionXmlWriter.FormatDetails() writes elements and attributes which govern how the disc is recorded and what label to print. This is the same pattern used by **ImageXmlWriter**. The body of the method looks like this:

```
void ProductionXmlWriter.FormatDetails(XmlStringBuffer xmlStrBuffer)
{
    AddActions(xmlStrBuffer);
}
```

The ProductionXmlWriter.FormatDetails() method is declared virtual which allows it to be completely overwritten. In most cases only a certain element needs to be changed. In those cases it is sufficient to overwrite one of the methods that is called from the FormatDetails() method, such as AddCustomize(). For example:

C++

```
class SampleUserProductionXmlWriter : public ImageXmlWriter
{
public:
    SampleUserProductionXmlWriter()
    {}
    virtual ~ SampleUserProductionXmlWriter() {}
    void AddCustomize(XmlStringBuffer
    &xmlStrBuffer)
    {
        // custom code here
    }
};
```

C#

```
class SampleUserProductionXmlWriter : ImageXmlWriter
{
public SampleUserProductionXmlWriter(){}
protected void AddCustomize(XmlStringBuffer xmlStrBuffer)
{
    // custom code here
}
};
```

---

*Note: Refer to the ProductionOrder DTD located at C:\Program Files (x86)\RimageSDK\ApiSdk\XML for the ProductionOrder format details.*

---

## XML Writer Factory

Once you write your extended XML writer class, you need to instantiate it at runtime. To instantiate a custom class, Rapid API requires access to an **XmlWriter** factory.

Rapid API internally uses a default XML writer factory to create existing **XmlWriter** objects. To create a user extended **XmlWriter** object, the API requires a user defined **XmlWriter** factory. The client application implements the **IXmlWriterFactory** interface and passes the custom factory to the API.

**IXmlWriterFactory** interface requires implementation of three methods:

- CreateImageXmlWriter(JobType) uses the new operator to create the custom **ImageXmlWriter** object. To specify the type of XML, a **JobType** is passed in to the **XmlWriter** factory.
- CreateProductionXmlWriter(JobType) uses the new operator to create the custom **ProductionXmlWriter** object. To specify the type of XML, a **JobType** is passed in to the **XmlWriter** factory.
- RemoveWriter(XmlWriter) uses the delete operator to remove the custom **XmlWriter** object.

---

*Note: Unless there are native resources to release or delete, the RemoveWriter() method doesn't need to do anything.*

---

**Example: Implementing an XML writer factory**

C++

```

class SampleUserXmlWriterFactory : public IXmlWriterFactory
{
public:
    SampleUserXmlWriterFactory()
    {}
    virtual ~SampleUserXmlWriterFactory() {}
    ImageXmlWriter* CreateImageXmlWriter(JobType type)
    {
        if ( type == ISOJobType )
        {
            return new SampleUserImageXmlWriter();
        }
        return NULL; // not created by custom factory
    }
    ProductionXmlWriter* CreateProductionXmlWriter(JobType type)
    {
        if ( type == UDFJobType )
        {
            return new SampleUserProductionXmlWriter();
        }
        return NULL; // not created by custom factory
    }
    bool RemoveWriter(XmlWriter *writer)
    {
        if ( writer != NULL )
        {
            delete writer;
            return true; // removed
        }
        return false; // not removed by custom factory
    }
};
SingleConnectionSession::GetInstance()-
>SetUserXmlWriterFactory( new SampleUserXmlWriterFactory());

```

C#

```

class SampleUserXmlWriterFactory : IXmlWriterFactory
{
public SampleUserXmlWriterFactory() {}
public ImageXmlWriter CreateImageXmlWriter(JobType type)
{
    if ( type == JobType.ISOJobType )
    {
        return new SampleUserImageXmlWriter();
    }
    return null; // not created by custom factory
}
}

```

```

}
public ProductionXmlWriter CreateProductionXmlWriter(JobType type)
{
    if ( type == UDFJobType )
    {
        return new SampleUserProductionXmlWriter();
    }
    return null; // not created by custom factory
}
public void RemoveWriter(XmlWriter writer)
};
SingleConnectionSession.GetInstance().SetUserXmlWriterFactory(
new SampleUserXmlWriterFactory());

```

---

**Note:** For more information on customizing job XML refer to the Rapid Custom sample project located at `C:\Users\Public\Documents\Rimage\RimageSDK\Samples\RapidApi`

---

## Modifying XML Directly

Another callback method is available to allow changes to the image and production order XML strings without the complexity of implementing a custom XML class. This is done by implementing the `IXmlModifyListener` interface, which contains a single callback method named `OnModifyOrderXml`. This method is invoked once immediately before Image order submission and once again before Production order submission. The order XML strings that are passed in may be changed, but any modifications must still meet the DTD validation requirements or the job will be rejected.

This interface was created to aid the integrator in cases where adjustments to the XML were required, but without the complexity of creating a custom job and job factory.

---

**NOTE:** It is very important that the `OrderId` not be changed, doing so will cause status messages to be lost. The `OrderId` is used as an index to find messages that belong to a specific job.

---

## Generate Custom Server Request XML

Server classes provide most of the functionality offered by the Rimage Imaging and Production servers. In cases where functionality is required that isn't provided or a newer server request DTD exists, custom server request XML can be generated. This is accomplished by extending the `XmlWriter` class and completely taking over XML generation. The extended `XmlWriter` class still has access to the `XmlStringBuffer` and all detailed formatting methods required to generate a valid XML string.

---

**Note:** The two DTDs involved in server requests are `ProductionServerRequest` and `ImageServerRequest` located at `C:\Program Files (x86)\RimageSDK\ApiSdk\XML`.

---

Once the XML is generated, call `Server.ExecuteRequest(String)` to send it to the server for processing. When the server completes the request, it replies with XML formatted to conform to either the `ProductionServerReply` or the `ImageServerReply` DTD. Call the `Server.GetXml()` method to access this XML. The following example illustrates the flow:

C++

```

// generate xml
LPCTSTR requestXml = GenerateProductionRequest(); // user defined method
// get a reference to a
server Server *server =
SingleConnectionSession::GetInstance()->GetServer("HOST1_PS01");
// execute the request
try
{
    // this call can time out
    server->ExecuteRequest(requestXml);
}
catch ( RimageException &e)
{
    // handle the exception
}
// get the reply
LPCTSTR replyXml = server->GetXml();
// parse the reply xml

```

C#

```

// generate xml
string requestXml = GenerateProductionRequest(); // user defined method
// get a reference to a
server Server server =
SingleConnectionSession.GetInstance().GetServer("HOST1_PS01");
// execute the request
try
{
    // this call can time out
    server.ExecuteRequest(requestXml);
}
catch ( RimageException e)
{
    // handle the exception
}
// get the reply
string replyXml = server.GetXml();
// parse the reply xml

```

XmlWriter class requires the generated XML to include the DTD file path. This is accomplished by communicating the DTD name, version, and folder location of the DTD file to the API.

To generate a valid server request XML, overwrite two **XmlWriter** virtual methods `FormatRootElement()` and `FormatDetails()`. To write out the XML header for the request, overwrite the `FormatRootElement()` method.

---

*Note: ProductionXmlWriter and ImageXmlWriter classes write out the correct header automatically.*

---

The following example shows how to generate the 'Get autoloader status' request.

C++

```

class SampleUserPSRequestXMLWriter : public XmlWriter
{
public:
    SampleUserPSRequestXMLWriter(

```

```

    }
    {
        SetDtdName("ProductionServerRequest");
        SetDtdFileVersion("1.4");
        SetDtdFolderPath("c:\\rimage\\xml");
    }
protected:
void FormatRootElement(XmlStringBuffer &xmlStrBuffer)
{
    xmlStrBuffer.WriteStartElement(GetDtdName(), 0);
    xmlStrBuffer.WriteAttribute("ServerId", "SWRASKINREST_PS01");
    xmlStrBuffer.WriteAttribute("ClientId", "client1");
}
void FormatDetails(XmlStringBuffer &xmlStrBuffer)
{
    xmlStrBuffer.WriteStartElement("GetServerStatus", 1);
    xmlStrBuffer.WriteAttribute("GetAutoloaderStatus", "true");
    xmlStrBuffer.WriteCloseElement("GetServerStatus");
}
};
C#
class SampleUserPSRequestXMLWriter : XmlWriter
{
public SampleUserPSRequestXMLWriter()
{
    SetDtdName("ProductionServerRequest");
    SetDtdFileVersion("1.4");
    SetDtdFolderPath("c:\\rimage\\xml");
}
protected override void FormatRootElement(XmlStringBuffer xmlStrBuffer)
{
    xmlStrBuffer.WriteStartElement(GetDtdName(), 0);
    xmlStrBuffer.WriteAttribute("ServerId", "SWRASKINREST_PS01");
    xmlStrBuffer.WriteAttribute("ClientId", "client1");
}
protected override void FormatDetails(XmlStringBuffer xmlStrBuffer)
{
    xmlStrBuffer.WriteStartElement("GetServerStatus", 1);
    xmlStrBuffer.WriteAttribute("GetAutoloaderStatus", "true");
    xmlStrBuffer.WriteCloseElement("GetServerStatus");
}
}
}

```

---

**Note:** For more information on customizing server request XML, refer to the Rapid Custom sample project located at C:\Users\Public\Documents\Rimage\RimageSDK\Samples\RapidApi

---

```

AddMedia(xmlStrBuffer);
AddTarget(xmlStrBuffer);
AddInOut(xmlStrBuffer);

```

## Samples

The Rimage SDK installation includes sample projects for working with the Rapid API. By default these projects are placed in the C:\Users\Public\Documents\Rimage\RimageSDK\Samples\RapidApi folder. The samples are broken into C++ and .NET (written in C#) samples. C++ samples are located under the \C++ subfolder and C# samples are in the \NET subfolder.



Three sample projects are available for each environment, they are:

- **Rapid Hello World** – this sample project is an introduction to the Rapid API. This sample takes the user through the most basic steps of connecting, creating and submitting a job, and disconnecting. This is meant to help you produce your first disc as quickly as possible.
- **Rapid Comprehensive** – this sample project includes examples of how to use the whole API. This includes setting up listeners, creating and customizing jobs, enumerating Rapid API objects, working with servers and alerts, and much more.
- **Rapid Custom project** – this sample project shows how to extend various classes to customize jobs and XML generation.

Two sample are available for C++ only.

- **Rapid ReadJob** (C++ only) – this sample project introduces ReadJob and allows users to run in two modes—bulk mode or non-bulk mode.
- **Rapid MFC** (C++ only) – this sample project was created in Visual Studio 2013 as an MFC dialog based application. It has a fully functional GUI and support for server alerts and durable job recovery.

## Deployment

### C++ Deployment

#### Build Information

The Rapid API has been compiled using the Visual Studio 2013 VC12 compiler. Rimage DLLs include their version in the name of the file. The name/version has the following format:

<name>\_<major>\_<minor>\_n\_<interface>.dll

- Major version is seldom incremented, but is done for significant architectural or feature changes.
- Minor version is incremented if a DLL is changed for a new release. Applications using this DLL need to be rebuilt.
- 'n' represents an internal build version for a specific minor version. The actual File version of the dll has a number in place of 'n'. For example if the dll is named RmRapid\_9\_0\_n\_1.dll, the File version of this dll could be 9.0.26.1.
- Interface version represents iterations of the API itself. If the exported interface of the DLL itself is changed, this version is incremented and the applications using this DLL need to be rebuilt.

---

*Note: The \_u option indicates Unicode versions; no \_u indicates non-Unicode versions.*

---

#### Required Files and Folders

The following files and directories are required in C++ projects. Specify the paths and specify the .lib files (either Unicode or non-Unicode) as indicated.

#### Required DLL Files (Non-Unicode)

Installed by default in: (on Windows 64 it will be C:\Program Files (x86)\ )

C:\Program Files\RimageSdk\ApiSdk\bin and \bin(x64).

RmRapid\_9\_0\_n\_1.dll

RmClient\_9\_0\_n\_8.dll

RmDiscover\_1\_3\_n\_2.dll

RmRms\_1\_6\_n\_2.dll

Microsoft Visual C++ 2013 SP1 Redistributable Package is required.

**Required DLL Files (Unicode)**

Installed by default in: (on Windows 64 it will be C:\Program Files (x86)\ )  
C:\Program Files\RimageSdk\ApiSdk\bin and \bin(x64).  
RmRapid\_9\_0\_n\_1\_u.dll  
RmClient\_9\_0\_n\_8\_u.dll  
RmDiscover\_1\_3\_n\_2.dll  
RmRms\_1\_6\_n\_2.dll

**Required LIB Files (Non-Unicode. Does not apply to .NET deployment.)**

RmRapid\_9\_0\_n\_2.lib

**Required LIB Files (Unicode. Does not apply to .NET deployment.)**

RmRapid\_9\_0\_n\_2\_u.lib

**Required Include Directory (Does not apply to .NET deployment.)**

Installed by default in C:\Program Files\RimageSdk\ApiSdk\include\rapid

**Required #include Statement (Does not apply to .NET deployment.)**

```
#include <RapidApiInclude.h>
```

(This file contains all headers files for the Rapid API.)

**Optional Files**

rmapi\_log.properties – Place this file in your application’s working folder to produce a Client API log file. rapid\_log.properties – Place this file in your application’s working folder to produce a Rapid API log file. These files can be found in C:\Program Files\RimageSdk\ApiSdk\bin folder.

## .NET Deployment

**Build Information**

The Rapid API has been compiled using Visual Studio 2013 and can support .NET Version 4.0 and higher. Rimage.Rapid.Api assembly implements the .NET API. This assembly can be used in any application written in a .NET supported language. This assembly is strongly named, which among other things means that Common Run Time (CLR) takes the Assembly version of this assembly into account at load time.

**Required Files and Folders**

The following files are required in C#, VB.NET, or any other .NET project.

**Required .NET Assembly Files**

Installed by default in C:\Program Files (x86)\RimageSdk\ApiSdk\bin.  
Rimage.Rapid.Api.dll

The rest of the file list is identical to the Unicode list in C++ Required Files and Folders section.

### **64 Bit Deployment**

SDK 9.0 includes x86 and x64 dlls and libs.

File system location for x86 files: C:\ Program Files (x86)\RimageSdk\ApiSdk\bin and \lib.

File system location for x64 files: C:\ Program Files (x86)\RimageSdk\ApiSdk\bin (x64) and \lib (x64).

---

*Note: 64-bit sample projects for C++ and C# are available in  
C:\Users\Public\Documents\Rimage\RimageSDK\Samples\RapidApi folder.*

---

## Appendix A

### Client ID and Job ID Uniqueness Rules

---

*Note: A JobID is automatically generated if you do not provide one.*

---

Each *ClientID* and *JobID* must be unique. To ensure job uniqueness, Rimage makes the following recommendations:

- The *ClientID* must be used to connect to Messaging Server (eMS). Messaging Server requires *ClientID* uniqueness and returns an error when connected if a non-unique *ClientID* is detected. This ensures *ClientID* uniqueness.
- 

*Note: Because more than one instance of an application can be run on one computer, the Rimage applications' ClientID is in the form of <HostName> + \_ + <ApplicationInstanceId>.*

---

- Integrators must ensure that the *JobIDs* they generate for a client application are unique. There is still a possibility that two clients will generate identical *JobIDs*, which is resolved as follows:
- Production and Imaging servers must take both *JobIDs* and *ClientIDs* into account to ensure order uniqueness internally to the server.

To reiterate:

- The *JobID* is unique in the client application's space.
  - The *ClientID* is unique in Messaging Server (eMS) space. The *ClientID* includes the <HostName> + \_ + <ApplicationInstanceId>.
- 

*Note: Alphanumeric character entries are typical for the ClientID and JobID. The period . and backslash \ must be excluded from the ClientID and JobID entries.*

---

## Appendix B

### Reference Documentation

For more information about Editlists, refer to the document located at: C:\Program Files (x86)\RimageSdk\Manuals\Programming Guides\Editlists.pdf

For more information about label merge fields, refer to the document at: C:\Program Files (x86)\RimageSdk\Manuals\Programming Guides\ Using Label Merge Fields.pdf

For more information on server alert Action IDs, refer to the document at: C:\Program Files (x86)\RimageSdk\Manuals\Programming Guides\ Server Alert Action IDs Reference.pdf

For more information on CD Text, refer to the document located at: C:\Program Files (x86)\RimageSdk\Manuals\Programming Guides\ Using CD Text.pdf.