Install Bridge Server on versions RSS 9.X

1. From a system that has internet connection, run DistSetup.exe.
2. Select the Download button from the upper right corner.

3. From the software deployment site (http://swdeploy.rimage.com/DistSetup/v9.4.1/feed/atom.xml), select Rimage Bridge Server under the Related Setups to download the installer.

4. Run the installer from the Rimage Control Center to install the Bridge Server (requires internet connection).
If the control center does not have internet connection, you can do a full download of the files for a local install.

Create a local install package for Bridge Server (the previous download is just an executable and requires internet access to pull the actual files down for the application).

1. After downloading the Bridge Server installer executable, create a shortcut for it.
2. Right-click the short cut and select Properties.
3. On the Target line, add -LAYOUT and press OK.
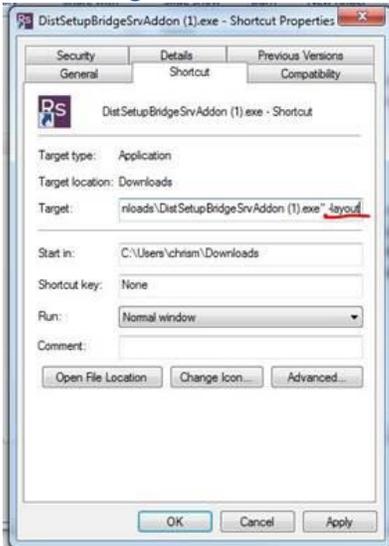
4. Run the shortcut. After pressing the Install button, you will be prompted to select a folder, you can either create a new one or choose an existing folder.

5. Press OK, and the files will be pulled down from the software deployment site and saved to the selected folder.
6. To install the Bridge Server to an offline system, copy the entire folder over, then run the DistSetupBridgeSvrAddon.exe from within the folder.