RIMAGE®

 Updating Firmware for Rimage Autoloaders Using Gemini Utility.

 Producer IV(8200) Catalyst (6000) Producer V(8300

Required Tools

- Firmware bin file. Locate this at www.rimage.com
- Gemin tool

Procedure for Rimage Producers and Catalyst.

1. **Locate services in the windows search on the pc.**
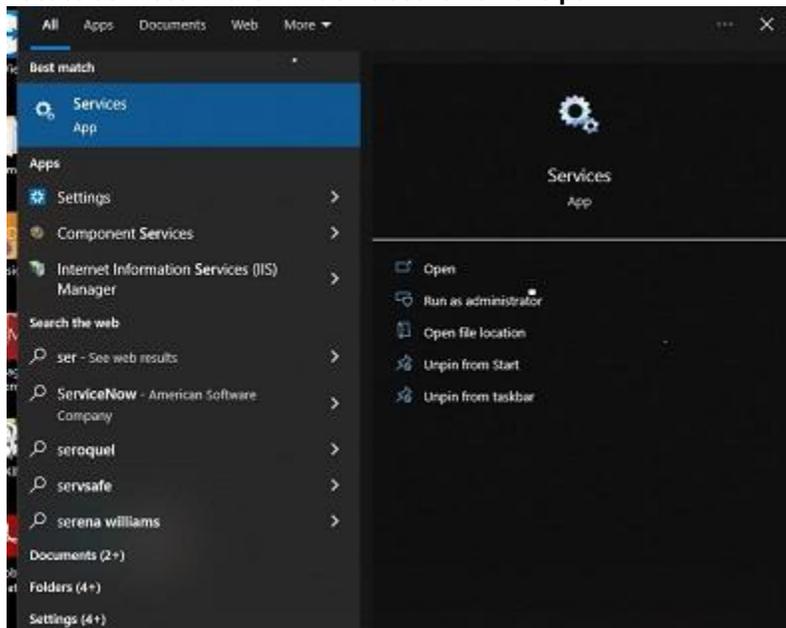
2. **Stop the Rimage Production Services.**

3. **Locate the Gemini Utility in Windows search on the pc**.
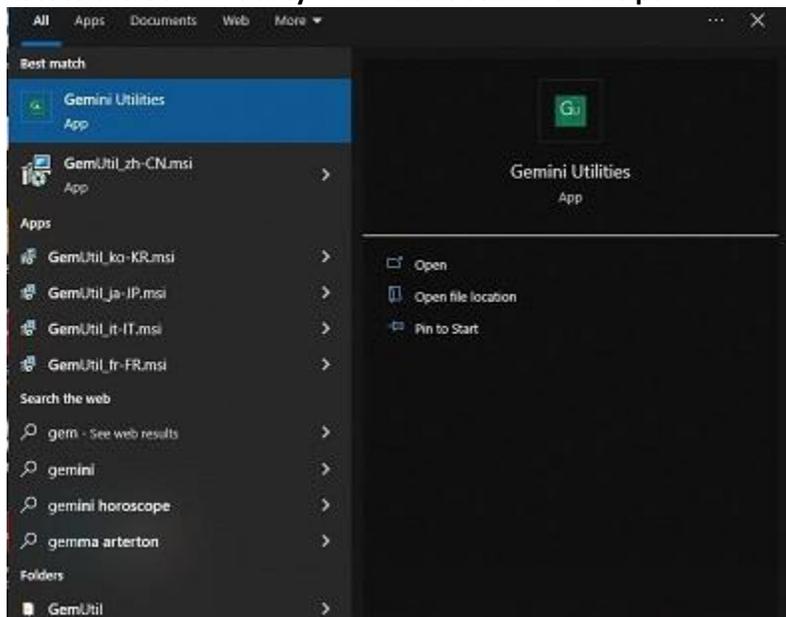
4. **Launch the Utility and browse to the location you saved the firmware file that was downloaded from our website. Press the update firmware button**.
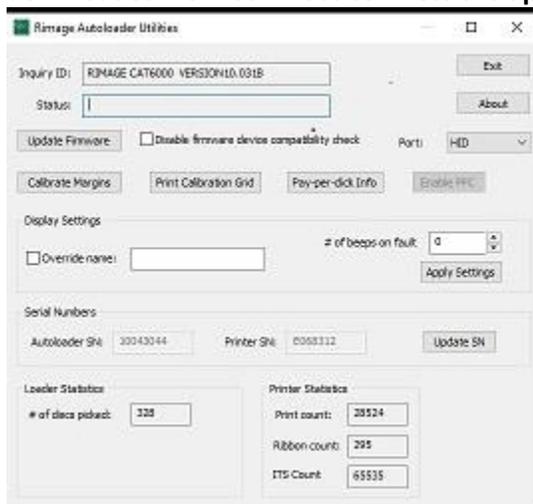
RIMAGE®

5. **When it is completed, restart the Rimage production server. Now the latest version should show in the Rimage system manager**.